


**A**

1. MARK 3/4" HOLE ON TOP OF DOOR WITH TEMPLATE. (7/8" TO CENTER AND 2 7/8" FROM EDGE)
2. BORE 3/4" HOLE, (IN THE CASE OF METAL, FIBERGLASS AND ALUMINUM DOORS PENETRATE THE SKIN AND REMOVE FOAM INSIDE AS NEEDED. IN THE CASE OF A WOOD DOOR BORE DOWN CENTER OF DOOR TO DEPTH OF 5 1/2 INCHES.)

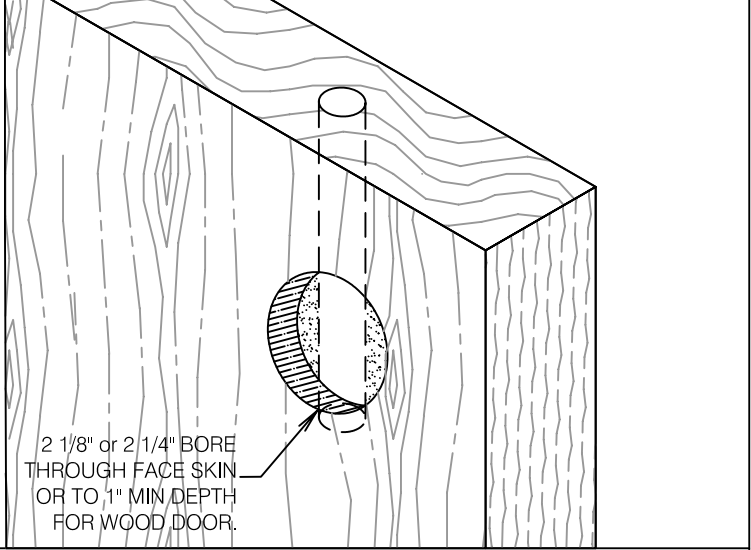


**B**

1. MARK 2 1/8" or 2 1/4" HOLE ON FACE OF DOOR WITH TEMPLATE. (2 3/8" TO CENTER FROM EDGE AND 4 1/2" FROM TOP)
2. MARK (4) SCREW HOLES WITH TEMPLATE.
3. BORE 2 1/8" or 2 1/4" HOLE IN FACE OF DOOR. (IN THE CASE OF METAL, FIBERGLASS AND ALUMINUM DOORS PENETRATE THE SKIN AND REMOVE FOAM INSIDE. IN THE CASE OF A WOOD DOOR BORE TO DEPTH OF 1 INCH).

MARK SCREW LOCATIONS ON FACE OF DOOR

TRI-BOLT  
CORRECT INSTALLATION  
IS OPPOSITE HINGE SIDE

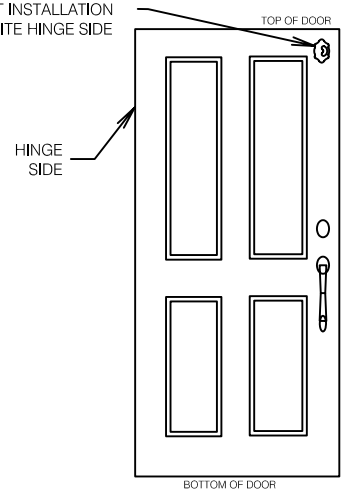

# INSTALLATION INSTRUCTIONS THE "TRI-BOLT" DOOR LOCK RIGHT SIDE INSTALLATION